

THROTTLE CABLE INSPECTION AND ADJUSTMENT

The Throttle Value Cable (TV Cable) is vital to the survival of the transmission as well as to the correct shift timing and shift feel. Cables must be examined for breakage, kinks, binding, fraying, and broken cable ends. To properly adjust the TV Cable push inward on the "D" shaped metal tap (see illustration) and pull the plastic cable housing towards the rear of the vehicle. With the engine off, depress the gas to the floor. A clicking sound and slight resistance when depressing the gas pedal are normal. This puts the cable in its properly adjusted position. If your engine does not have brackets and connection points for the TV cable contact Countywide Transmissions (609- 893-7401) so that we can provide you with information on how to install these parts. NEVER operate the transmission without the TV cable hooked up and properly adjusted.

